

SPECIFICATION

- Light Source LED Module (Mounted)
- Body White(W), Matte black(M), Silver(S)
- Light Distribution N=Narrow, M=Medium
- Vertical aiming angle Upper10°, Lower90°
- Horizontal aiming angle 380°
- Dedicated Driver Constant current (50/60Hz shared)
- Fixture Input voltage 32, 6V
- Fixture Input current 0.38A(MAX)
- Weight 250g
- tool for pan/tilt lock is equipped


PRODUCT CODE

MMP-060S/5H/W·M·S/FS/N·M/10A24/DL/3
MMP-060S/5H/W·M·S/FS/N·M/10A27/DL/3
MMP-060S/5H/W·M·S/FS/N·M/10A30/DL/3
MMP-060S/5H/W·M·S/FS/N·M/10A35/DL/3
MMP-060S/5H/W·M·S/FS/N·M/10A40/DL/3


OPTION

Full Diffuser Lens Filter MLA-060/DF01
Semi Diffuser Lens Filter MLA-060/DS01
Full Spread Lens Filter MLA-060/SF01
Semi Spread Lens Filter MLA-060/SS01
Edge Control Lens Filters MLA-060/EC01
Sharpener Lens MLA-060/SH01
(Narrow only)


Attachment plate dimension

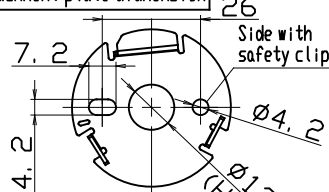


The hole for wire on the board $\phi 13$

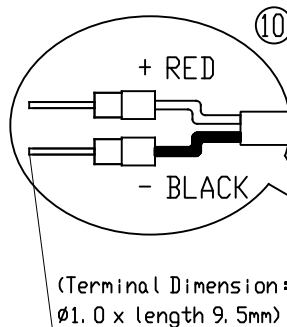

(mm)

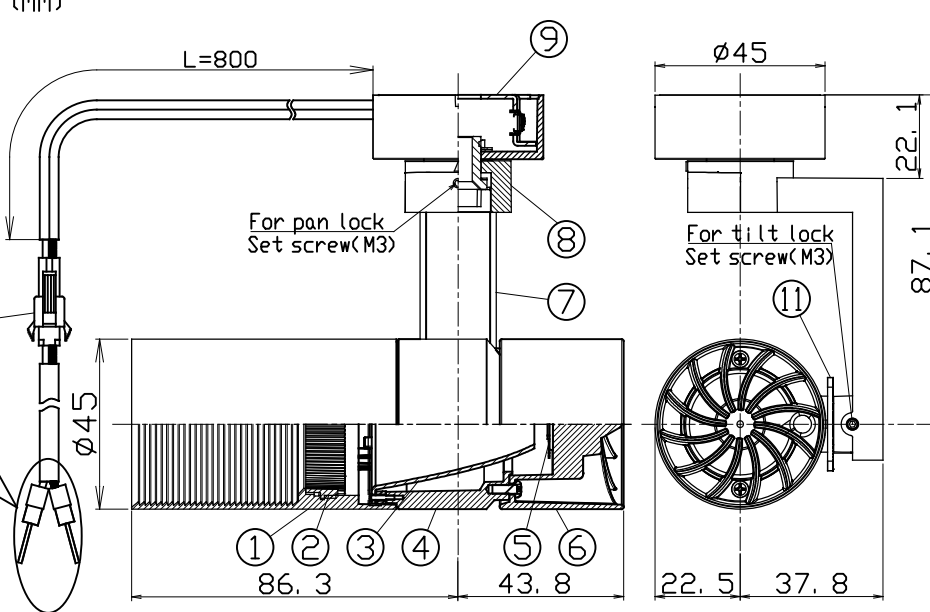

	PARTS	MATERIAL	REMARK
1	Hood	ADC	Acrylic Baking Finish
2	Option Holder	ADC	Acrylic Baking Finish
3	Reflector	ADC	
4	Body	ADC	Acrylic Baking Finish
5	LED Module		
6	Socket Holder	ADC	Acrylic Baking Finish
7	Arm	ADC	Acrylic Baking Finish
8	Flange Case	ADC	Acrylic Baking Finish
9	Attachment Plate	Steel	
10	Safety Connector	Resin	
11	Tilt Protractor	Resin	

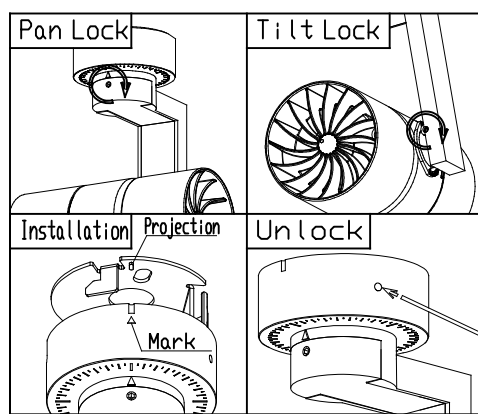

ATTENTION

- Emission color and brightness would be different even within the same model.
- Do not use a radio or TV near the fixtures. The unit may generate noise in the radio or TV.
- Danger! Do not remodel fixtures.
- Please do not irradiate the lamp upward. Dust accumulates in the light emitting part, which may cause fire.
- Keep distance of the fixtures and objects 0.1m or more.
- Use within 0°C~35°C ambient temperature range
- Please do not move the fixture body under the situation the pan/tilt lock works.
- Please do not unfasten the set crew for panm/tilt lock too mach. Otherwise, it may be dropped and lost.
- Please install the attachment plate in the substrate area with the screw(M4).
- When attaching the main body to the attachment plate, please put the projection of the attachment plate in the triangle mark on the side of the flange case.
- After attaching the main body to the attachment plate, please make sure that the main body itself is surely locked.
- When taking off the main body from the attachment plate, please insert the stick whose diameter is less than $\phi 2$ mm into the hole on the side of the flange case to unlock.

- Please use the 'class2' driver.
In that case, grounding is not required.