
Installation Guide

for saftv


Thank you very much for choosing our product. Before using the product, please read this Installation Manual carefully. Please ask an electrical construction shop for the installation of this product. After the installation, please surely give this Installation Manual back to the user.

The length of ConsciLed main unit and secondary wire to the dedicated driver

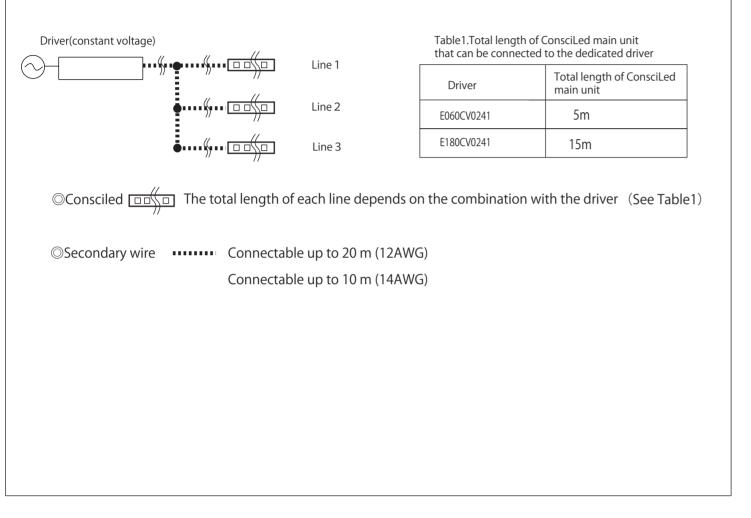

	E060CV0241(60W)				E180CV0241(180W)															
	1	2	3	4	5	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
ConsciLed + Driver (Power consumption:W)	15	28	42	56	70	17	29	42	54	66	79	91	104	117	128	141	153	166	179	192
ConsciLed + Driver (Apparent power:VA)	16	29	42	56	70	19	31	43	55	68	80	92	105	118	129	142	154	167	180	193




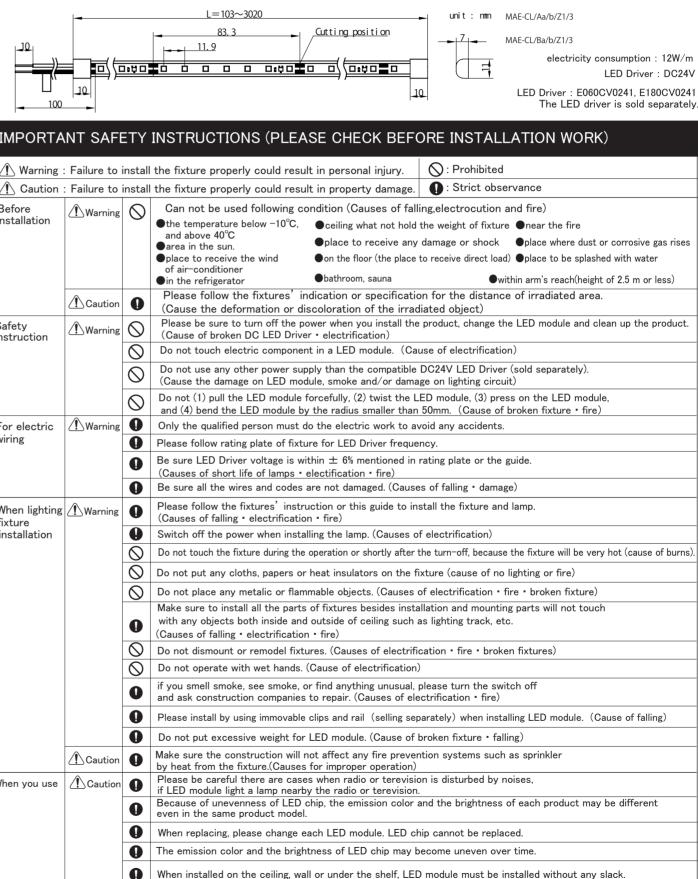


<u>^</u>			I the fixture properly could result in per-
	: Failure to	install	I the fixture properly could result in pro
Before installation	Warning	\bigcirc	Can not be used following condition
Installation			●the temperature below -10°C, ●ceilir and above 40°C
			●area in the sun. ●place
			 place to receive the wind of air-conditioner
			●in the refrigerator ●bathr
	▲ Caution	0	Please follow the fixtures' indication (Cause the deformation or discolorat
Safety	Warning	\bigcirc	Please be sure to turn off the power whe (Cause of broken DC LED Driver • elect
instruction		\bigcirc	Do not touch electric component in a LE
		\bigcirc	Do not use any other power supply than (Cause the damage on LED module, smo
		\bigcirc	Do not (1) pull the LED module forcefully and (4) bend the LED module by the rad
For electric	Warning	0	Only the qualified person must do the ele
wiring		0	Please follow rating plate of fixture for LE
		0	Be sure LED Driver voltage is within ± 6 (Causes of short life of lamps • electifica
		0	Be sure all the wires and codes are not o
When lighting fixture installation	▲ Warning	0	Please follow the fixtures' instruction or (Causes of falling • electrification • fire)
		0	Switch off the power when installing the
		\bigcirc	Do not touch the fixture during the operation
		\bigcirc	Do not put any cloths, papers or heat ins
		\bigcirc	Do not place any metalic or flammable ob
		0	Make sure to install all the parts of fixtur with any objects both inside and outside (Causes of falling • electrification • fire)
		\bigcirc	Do not dismount or remodel fixtures. (Ca
		\bigcirc	Do not operate with wet hands. (Cause o
		0	if you smell smoke, see smoke, or find an and ask construction companies to repair
		0	Please install by using immovable clips and
		0	Do not put excessive weight for LED mo
	Caution	0	Make sure the construction will not affect by heat from the fixture.(Causes for impr
When you use	Caution	0	Please be careful there are cases when r if LED module light a lamp nearby the rac
		0	Because of unevenness of LED chip, the even in the same product model.
		0	When replacing, please change each LED
		0	The emission color and the brightness of
		0	When installed on the ceiling, wall or unde

Installation Guide

MAE-CL Z1/3 Series

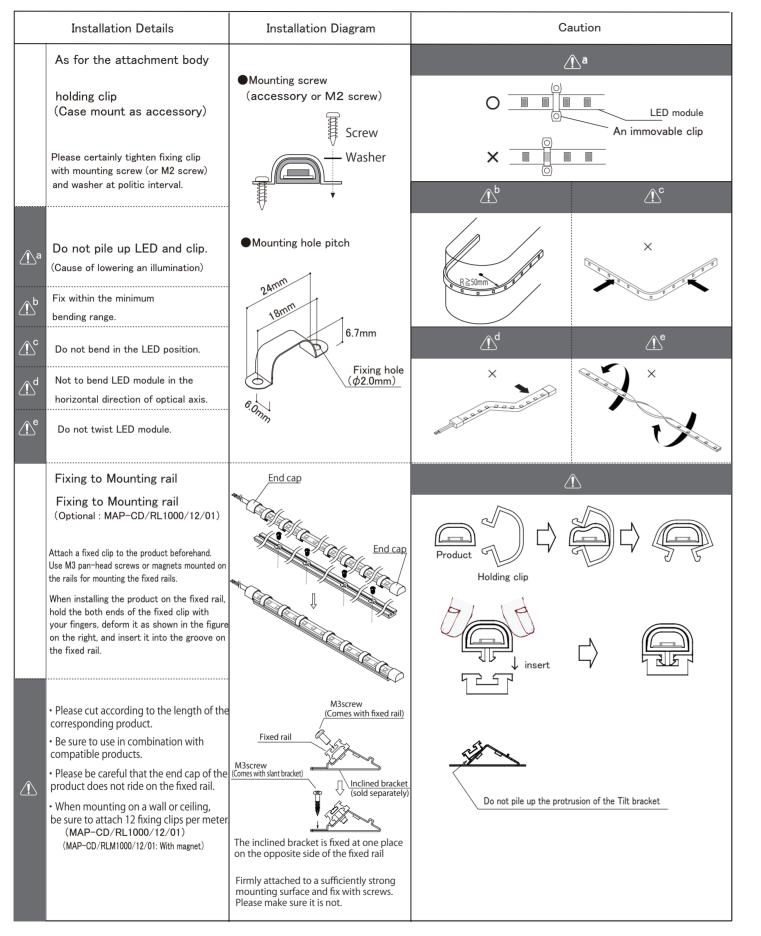

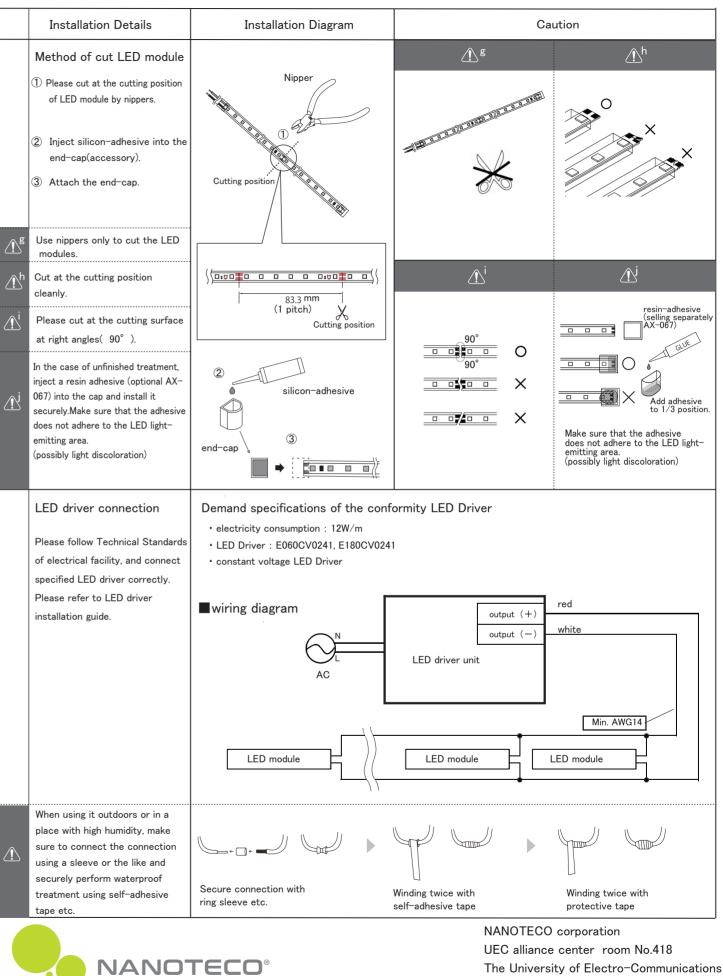

Bringing Japanese Sensibility

To Science Technology

(Contact)

Concord Lighting

5/F, Longbow House,14-20 Chiswell Street, London, EC1Y 4TW, UK Tel : +44-01273-616649

To install the fixture safety

1-1-1 Kotorimachi Chofu-shi Tokyo 182-0026, Japan

Life of the lighting fixtures

There is a limit of the life span of lighting fixture.

In 8 to 10 years after the installation, the deterioration of inside the lighting fixture may progress,

even if no problem is found with its appearance.

** service condition : the ambient temperature is 30 degrees, 10 hours lighting /day, 3000 hours a year. (see JIS C 8105-1)

- In case the ambient temperature is high and the lighting time is long, the service life of a luminaire to become to short.
- Please receive the checking by an expert at least every 3 years..
- (To prevent fire, electrification and falling)

Warranty

warranty period	We define our own long-term warranty period.						
Contents of Warranty	We will repair the lighting fixture or replace to new one within the warranty period free of charge.						
Exceptions	Following cases are exceptions and excluded from our warranty:						
	●In case of accidents or troubles, caused by the wrong use or installation						
	In case of repair or modification done by any other company than ModuleX or the service shop appointed by ModuleX						
	In case of accidents or troubles, caused by the modification or part replacement done by yourself.						
	•Deterioration over time, such as the discoloration of the painted surface or metal plated surface.						
	●In case of accidents or troubles, caused by or during the move from the originally installed place.						
	In case of accidents and troubles, caused by, but not limited to fires, earthquakes, flood and flash-to-ground.						
	In case of accidents and troubles, caused by the voltage and frequency not specified in our specifications or manuals etc.						
	In case of accidents and troubles, caused by the installation at the wrong place where is not suitable for the product, such as high humid place, vibrating place, dusty place or place polluted by salt.						
	Secondary loss, such as the damage to the building or loss of sales opportunities etc, shall not be compensated in any case.						

After survice

Please contact vendor and a place of business as mentioned bellow if you wish to consult troubleshooting and do not understand.




NANOTECO corporation UEC alliance center room No.418 The University of Electro-Communications 1-1-1 Kotorimachi Chofu-shi Tokyo 182-0026, Japan



Maintenance Guide

MAE-CL Z1/3 Series

MAE-CL Z1/3 Series

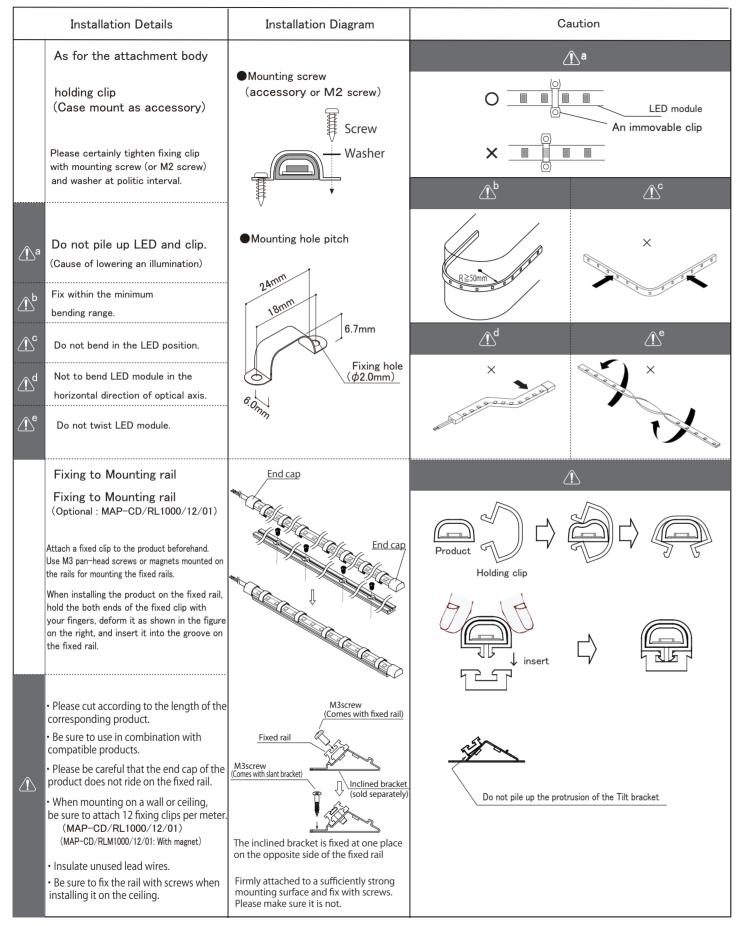

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS Please be careful there are cases when radio or terevision is disturbed by noises, 0 if LED module light a lamp nearby the radio or terevision. There are cases where the LED element vary in color, brightness even if LED elements are the same product 0 because LED element is uneven. Please understand this. When you use Please exchange the LED module and all that time. 0 Please be careful because you cannot exchange a substance the LED element. There are cases where the LED element color, brightness may be different. Please understand this. 0 0 Please install LED module try not to slacken when LED module install in the ceiling, surface of wall.



(Contact)

Concord Lighting 5/F, Longbow House,14-20 Chiswell Street, London, EC1Y 4TW, UK Tel:+44-01273-616649

NANOTECO corporation UEC alliance center room No.418 The University of Electro-Communications 1-1-1 Kotorimachi Chofu-shi Tokyo 182-0026, Japan