
#### Installation Guide

for saftv

Thank you very much for choosing our product. Before using the product, please read this Installation Manual carefully. Please ask an electrical construction shop for the installation of this product. After the installation, please surely give this Installation Manual back to the user.

The length of ConsciLed main unit and secondary wire to the dedicated driver

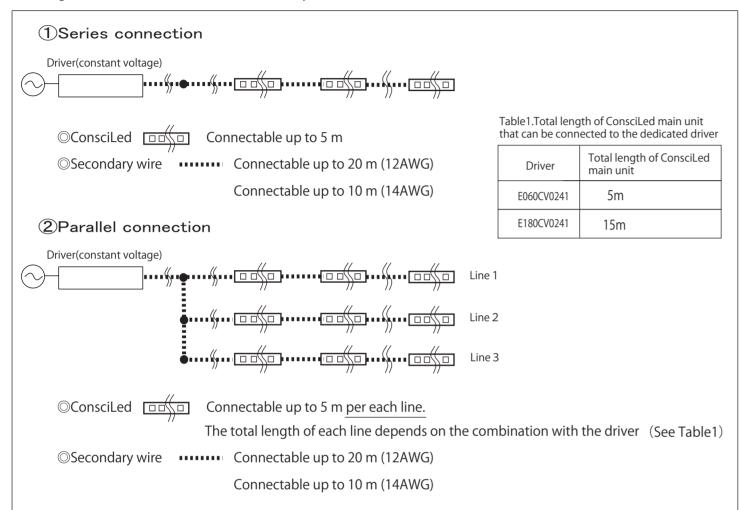


	E060CV0241(60W)				E180CV0241(180W)															
	1	2	3	4	5	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
ConsciLed + Driver (Power consumption:W)	15	28	42	56	70	17	29	42	54	66	79	91	104	117	128	141	153	166	179	192
ConsciLed + Driver (Apparent power:VA)	16	29	42	56	70	19	31	43	55	68	80	92	105	118	129	142	154	167	180	193


	N		NOTECO® Propration
			L=103~5020 83.3 11.9 Cutting
IMPORTA	NT SAFE	ΞTΥ	INSTRUCTIONS (PLEASE C
🕐 Warning	Failure to	instal	the fixture properly could result in pe
Caution	: Failure to	instal	I the fixture properly could result in pr
Before installation	Warning	$\otimes$	Can not be used following condition • the temperature below -10°C, • ceili and above 40°C • area in the sun. • • • • • • • • • • • • • • • • • • •
	Caution	0	Please follow the fixtures' indication (Cause the deformation or discoloration)
Safety instruction	Warning	$\bigcirc$	Please be sure to turn off the power wh (Cause of broken DC LED Driver • elec
		$\bigcirc$	Do not touch electric component in a L
		$\bigcirc$	Do not use any other power supply tha (Cause the damage on LED module, sm
		$\bigcirc$	Do not (1) pull the LED module forceful and (4) bend the LED module by the ra
For electric wiring	Warning	-	Only the qualified person must do the e
		0	Please follow rating plate of fixture for l
		0	Be sure LED Driver voltage is within ± (Causes of short life of lamps • electific Be sure all the wires and codes are not
When lighting fixture installation	Warning		Please follow the fixtures' instruction of (Causes of falling • electrification • fire
		0	Switch off the power when installing the
		$\overline{\bigcirc}$	Do not touch the fixture during the operation
		Õ	Do not put any cloths, papers or heat ir
		$\bigcirc$	Do not place any metalic or flammable of
		0	Make sure to install all the parts of fixtu with any objects both inside and outsid (Causes of falling • electrification • fire)
		$\bigcirc$	Do not dismount or remodel fixtures. (C
		$\bigcirc$	Do not operate with wet hands. (Cause
		0	if you smell smoke, see smoke, or find a and ask construction companies to repa
		0	Please install by using immovable clips a
		0	Do not put excessive weight for LED m
	Caution	0	Make sure the construction will not affe by heat from the fixture.(Causes for imp
When you use	Caution	0	Please be careful there are cases wher if LED module light a lamp nearby the r Because of unevenness of LED chip, th even in the same product model.
		0	When replacing, please change each LE
		0	The emission color and the brightness of
		0	When installed on the ceiling, wall or un

# Installation Guide

unit :mm electricity consumption : 12W/m LED Driver : DC24V LED Driver : E060CV0241, E180CV0241 The LED driver is sold separately.							
HECK BEFORE INSTALLATION WORK)							
rsonal injury. 🚫 : Prohibited							
operty damage. 🚺 : Strict observance							
(Causes of falling,electrocution and fire)							
ng what not hold the weight of fixture I near the fire							
e to receive any damage or shock • • • • • • • • • • • • • • • • • • •							
●within arm's reach(height of 2.5 m or less)							
n or specification for the distance of irradiated area. tion of the irradiated object)							
en you install the product, change the LED module and clean up the product. trification)							
ED module. (Cause of electrification)							
n the compatible DC24V LED Driver (sold separately). oke and/or damage on lighting circuit)							
y, (2) twist the LED module, (3) press on the LED module, dius smaller than 50mm. (Cause of broken fixture • fire)							
ED Driver frequency							
ED Driver frequency. 6% mentioned in rating plate or the guide. ation • fire)							
damaged. (Causes of falling • damage)							
r this guide to install the fixture and lamp.							
lamp. (Causes of electrification)							
n or shortly after the turn-off, because the fixture will be very hot (cause of burns).							
sulators on the fixture (cause of no lighting or fire)							
bjects. (Causes of electrification • fire • broken fixture)							
res besides installation and mounting parts will not touch e of ceiling such as lighting track, etc.							
auses of electrification • fire • broken fixtures)							
of electrification)							
nything unusual, please turn the switch off ir. (Causes of electrification • fire)							
d rail(selling separately)when installing LED module.(Cause of falling)							
odule. (Cause of broken fixture • falling)							
ct any fire prevention systems such as sprinkler roper operation)							
radio or terevision is disturbed by noises, dio or terevision.							
e emission color and the brightness of each product may be different							
) module. LED chip cannot be replaced.							
f LED chip may become uneven over time.							
ler the shelf, LED module must be installed without any slack.							

### MAE-CL C Z1/3 Series

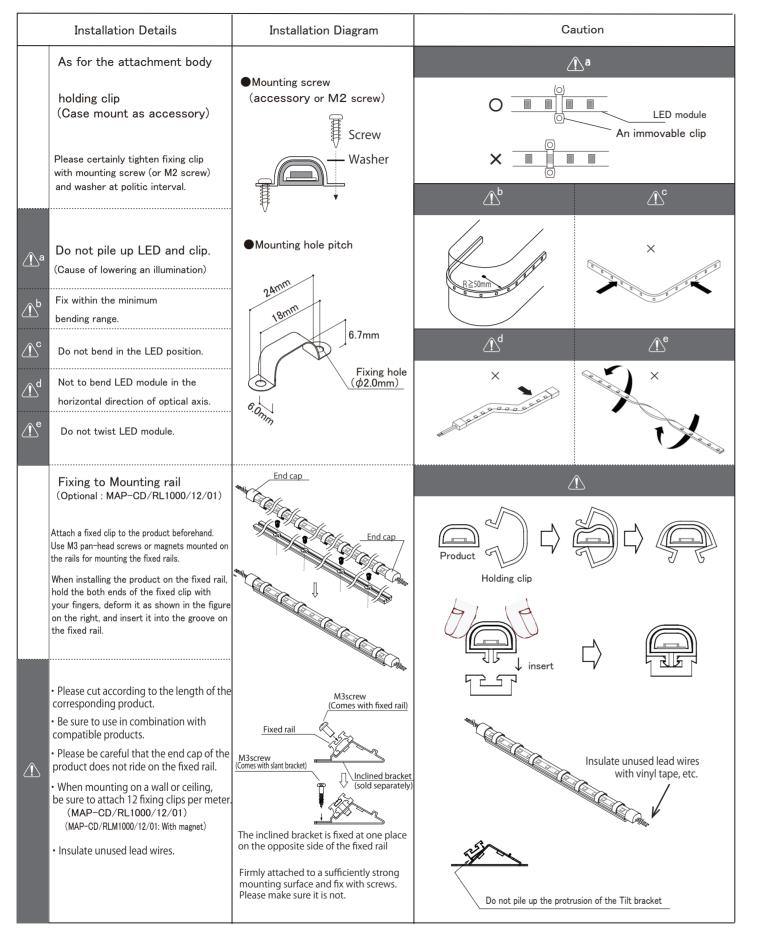

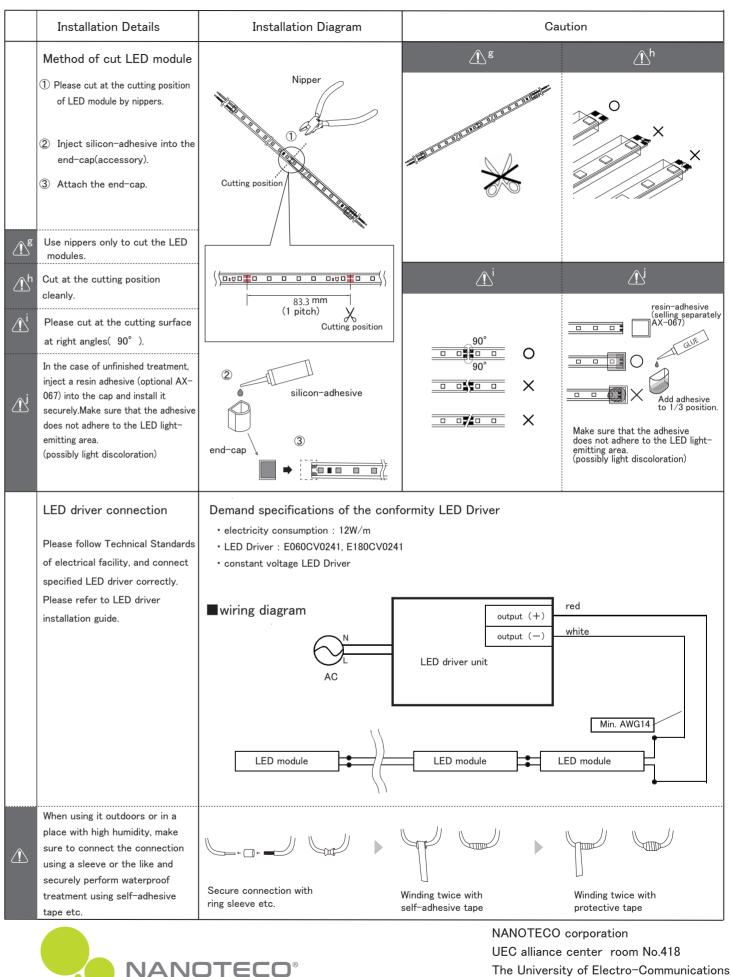

Bringing Japanese Sensibility To Science Technology

#### (Contact)

#### **Concord Lighting**

5/F, Longbow House,14-20 Chiswell Street, London, EC1Y 4TW, UK Tel : +44-01273-616649

#### To install the fixture safety

1–1–1 Kotorimachi Chofu-shi Tokyo

182-0026, Japan

# Life of the lighting fixtures

There is a limit of the life span of lighting fixture.

In 8 to 10 years after the installation, the deterioration of inside the lighting fixture may progress,

even if no problem is found with its appearance.

\*\* service condition : the ambient temperature is 30 degrees, 10 hours lighting /day, 3000 hours a year. (see JIS C 8105-1)

- In case the ambient temperature is high and the lighting time is long, the service life of a luminaire to become to short.
- Please receive the checking by an expert at least every 3 years..
- (To prevent fire, electrification and falling)

# Warranty


warranty period	We define our own long-term warranty period.
Contents of Warranty	We will repair the lighting fixture or replace to new one within the warranty period free of charge.
Exceptions	Following cases are exceptions and excluded from our warranty:
	●In case of accidents or troubles, caused by the wrong use or installation
	In case of repair or modification done by any other company than ModuleX or the service shop appointed by ModuleX
	In case of accidents or troubles, caused by the modification or part replacement done by yourself.
	Deterioration over time, such as the discoloration of the painted surface or metal plated surface.
	●In case of accidents or troubles, caused by or during the move from the originally installed place.
	In case of accidents and troubles, caused by, but not limited to fires, earthquakes, flood and flash-to-ground.
	In case of accidents and troubles, caused by the voltage and frequency not specified in our specifications or manuals etc.
	In case of accidents and troubles, caused by the installation at the wrong place where is not suitable for the product, such as high humid place, vibrating place, dusty place or place polluted by salt.
	Secondary loss, such as the damage to the building or loss of sales opportunities etc, shall not be compensated in any case.

#### After survice

Please contact vendor and a place of business as mentioned bellow if you wish to consult troubleshooting and do not understand.




NANOTECO corporation UEC alliance center room No.418 The University of Electro-Communications 1-1-1 Kotorimachi Chofu-shi Tokyo 182-0026, Japan

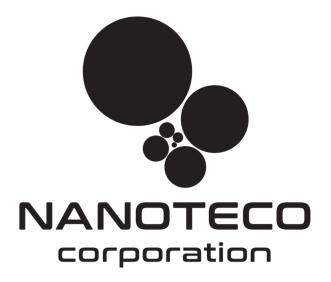

# Maintenance Guide

MAE-CL Z1/3 Series

# MAE-CL Z1/3 Series

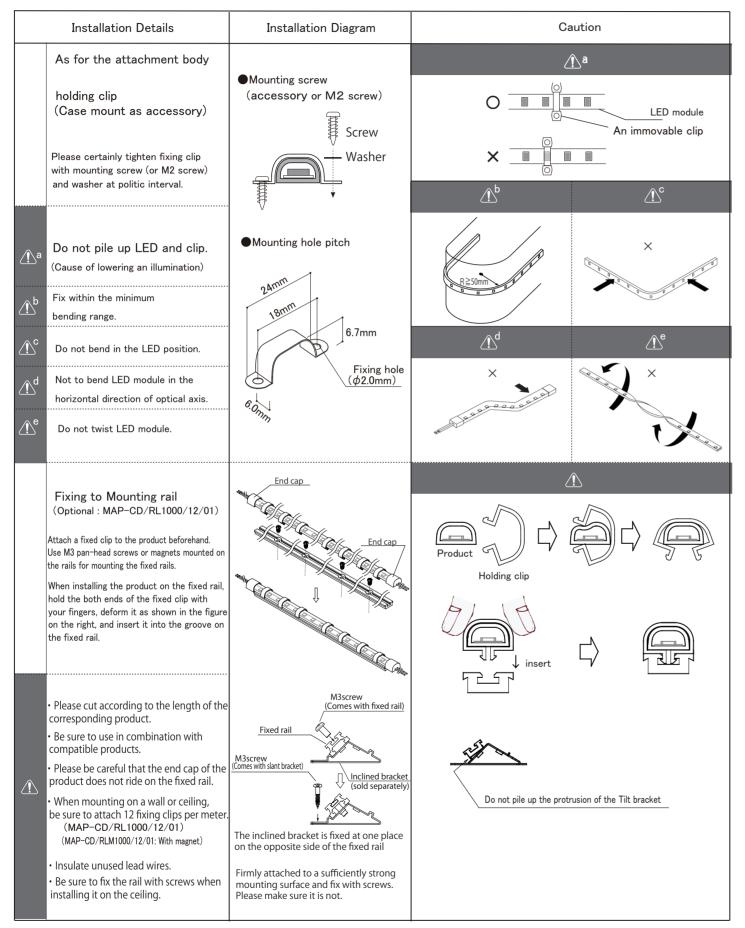

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE I							
When you use	0	Please be careful there are cases when radio if LED module light a lamp nearby the radio of					
	0	There are cases where the LED element vary because LED element is uneven. Please unde					
	0	Please exchange the LED module and all that Please be careful because you cannot exchan					
	0	There are cases where the LED element colo					
		Plagas install LED module the net to cleaken					



#### (Contact)

### Concord Lighting

5/F, Longbow House,14-20 Chiswell Street, London, EC1Y 4TW, UK Tel : +44-01273-616649

# INSTRUCTIONS

io or terevision is disturbed by noises, or terevision.

ry in color, brightness even if LED elements are the same product derstand this.

at time.

ange a substance the LED element.

lor, brightness may be different. Please understand this.

Please install LED module try not to slacken when LED module install in the ceiling, surface of wall.

NANOTECO corporation UEC alliance center room No.418 The University of Electro-Communications 1–1–1 Kotorimachi Chofu-shi Tokyo 182–0026, Japan