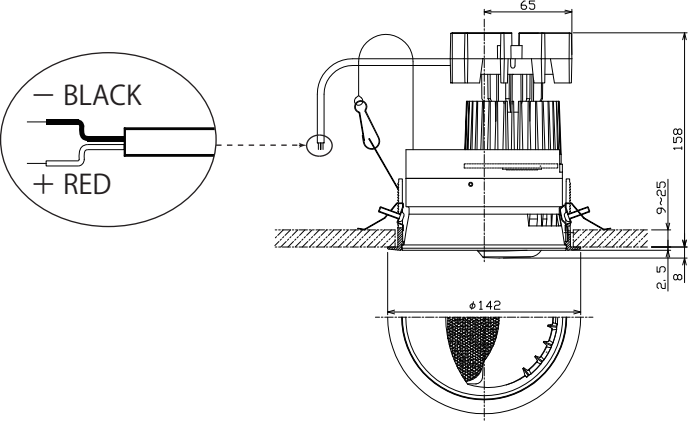
 
 






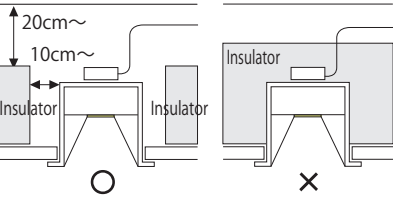





















SX-B4456D/CE/RB

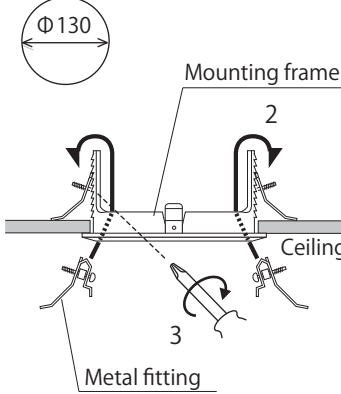

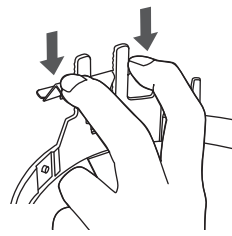

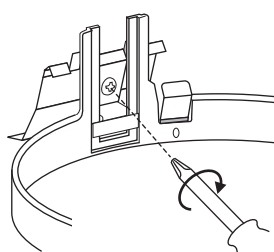


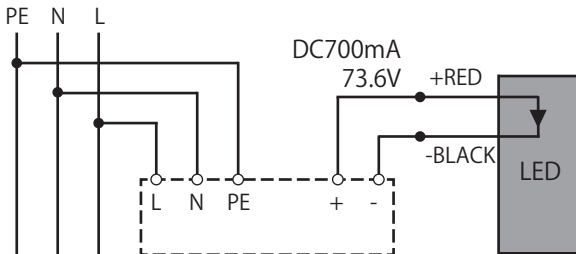
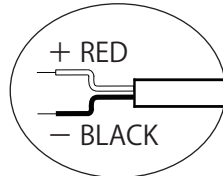



	Ceiling cut out	Lamp	COB
		input voltage	73.6V
	Ceiling thickness	Input current	0.7A
		Driver	Sold separately
Weight		Please use constant current driver.	
1.1kg			

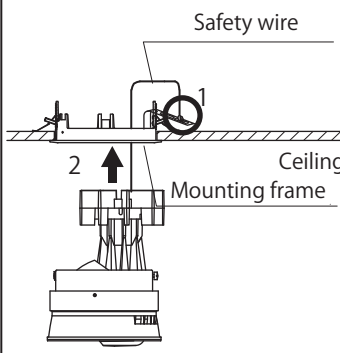
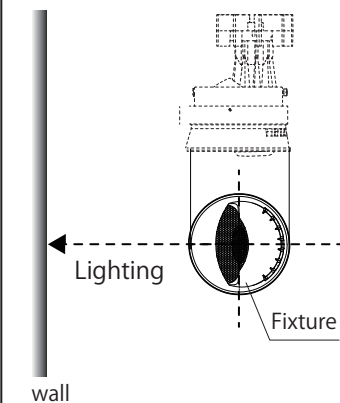


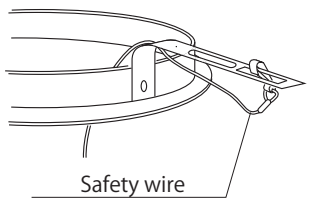
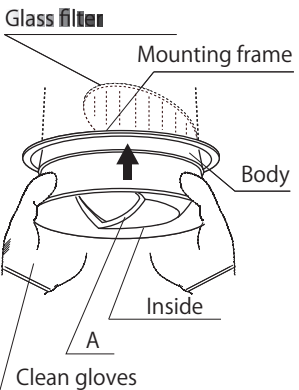



ModuleX

Installation Guide | Lighting Fixture

To install the fixture safely 《 Read carefully and follow all the instructions in the guide 》			
 Warning : Failure to install the fixture properly could result in personal injury.		 : Prohibited	
 Caution : Failure to install the fixture properly could result in property damage.		 : Strict observance	
Before installation	 Warning	The fixture is for indoor use only in general conditions. This fixture can only be installed on a horizontal ceiling. Can not be used following conditions (Causes of falling, electrocution and fire) ●Inclined, uneven surface      ●Insulated inside of ceiling      ●Ambient temperature under 0°C and over 35°C ●High humidity      ●Ceiling which can't hold the fixture weight ●Outside      ●On the wall ●On the floor      ●Places affected by wind or air-conditioner machine ●Vibrated or shocked areas      ●Near fire ●Areas get direct sunlight      ●Dusty areas, corrosive gas outbreaks areas Please contact if you are not able to judge whether installation environment is suitable to the places or not.	
			
For electric wiring	 Caution	 Please follow the fixtures' indication or specification for the distance of irradiated area. (Causes of change in shape, change in color of irradiated objects)	
	 Warning	 Only qualified person may work on electric wiring and equipment. (Cause of accidents)	
		Use alternating current. Please follow rating plate of fixtures for power supply frequency. (Cause of electrification • fire) (50Hz • 60 Hz common use for ballasts and incandescent lamp fixtures)	
		Be sure power supply voltage is within ±6% mentioned in rating plate or the guide. (Causes of short life of lamps • electrification • fire)	
At lighting fixture installation	 Warning	 Please follow the fixtures' instruction or this guide to install the fixture and lamp. (Causes of falling • electrification • fire)	
		 Switch off the power when installing the lamp. (Causes of electrification)	
		Do not touch the fixture when switch is on or just turn off the switch because of high temperature.	
		Do not put or cover the fixture by any cloths, papers, or insulators.(Causes of not lighting • fire)	
		Do not place any metallic or flammable objects. (Cause of electrification • fire • broken fixture)	
		Make sure to install all the parts of fixtures besides installation and mounting parts will not touch with any objects both inside and outside of ceiling such as lighting track, etc. (Causes of falling • electrification • fire)	
		Do not dismount or remodel fixtures. (Cause of electrification • fire • falling • broken fixtures)	
		Do not operate with wet hands.	
		If you smell smoke, see smoke, or find anything unusual, please turn the switch off and ask construction companies to repair. (Cause of electrification • fire)	
	 Caution	 Make sure the construction will not affect any fire prevention systems such as sprinkler by heat from the fixture. (Causes for improper operation)	

SX-B4456D/CE/RB

Installation Details		Installation Diagram	Caution	
Install the mounting equipment for ceiling cut out		<div>1 Ceiling cut out</div> <div></div>	<div> a</div> <div></div> <div>Push tight</div>	<div> b</div> <div></div> <div>Standard to screw torque 1.0~2.0N · m</div>
1	Cut out a hole and install the mounting frame			
2	Slide the metal fittings from upper side			
3	Use a screw driver and tighten the metal fittings			
 a	On step 2, please fix the metal fitting firmly with your fingers. If not, it may cause falling of fixtures.			
 b	Make sure to tighten the metal fittings securely with a screwdriver. (torque 1.0 ~2.0 N · m) If it is loose, it may cause falling of the fixture.			
Wiring connection		<div>Wiring diagram</div> <div></div> <div>Driver</div>	<div>CAUTION !</div> <div>Do not reverse polarity !</div> <div></div>	
	Please connect according to the description of a power supply.			
	When connecting the driver, careful attention should be paid to connecting + and -.			
	Metal part in a cable point, please don't touch with bare hand directly.			

Installation Details		Installation Diagram	Caution	
Installation to ceiling		 <p>As you support edge of a main part, please push it</p> <p>※An inside glass filter is not touched by hand</p> <p>【Direction of radiation】</p> 		
1	Install the safety wire to the mounting frame			
2	Install the fixture to the mounting frame			
	Make sure to install the safety wire to the mounting frame securely.			
	Do not touch inner side of the body with bare hands. Use clean soft cloth to clean up and maintain inner side of the body.			
	Make sure the fixture will not touch any objects in ceiling.	※When you remove fixture from mounting frame, as you support edge of a main part, please reduce with the portion of A		