

Discontinued product
MMP-080S/3H/LE/10B/DL/3

| | | |
|--|------------------|--|
| | Weight 0.53kg | Lamp COB input voltage 36.9V Input current 0.48A MAX. Driver Sold separately Please use constant current driver. |
| | Rotate Degrees | |
| | 10° | |
| | 90° | |



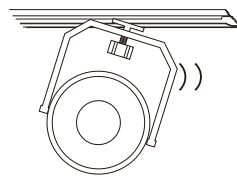

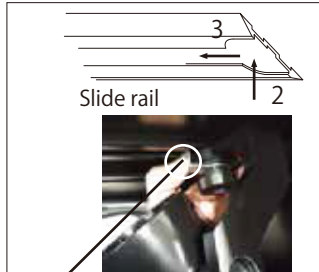

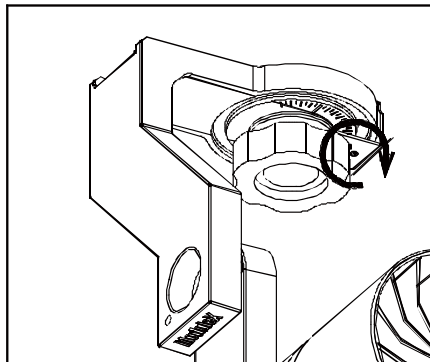
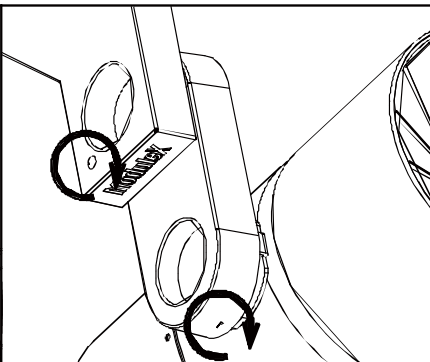
ModuleX

Installation Guide | Lighting Fixture

To install the fixture safely 《 Read carefully and follow all the instructions in the guide 》

| | | |
|--|-----------|---|
| ⚠ Warning : Failure to install the fixture properly could result in personal injury. | | 🚫 : Prohibited |
| ⚠ Caution : Failure to install the fixture properly could result in property damage. | | ❗ : Strict observance |
| Before installation | ⚠ Warning | <p>The fixture is for indoor use only in general conditions. This fixture can only be installed on a horizontal ceiling. Can not be used following conditions (Causes of falling, electrocution and fire)</p> <div><div>●Inclined, uneven surface</div><div>●High humidity</div><div>●Outside</div><div>●On the floor</div><div>●Vibrated or shocked areas</div><div>●Areas get direct sunlight</div></div> <div><div>●Insulated inside of ceiling</div><div>●Ceiling which can't hold the fixture weight</div><div>●On the wall</div><div>●Places affected by wind or air-conditioner machine</div><div>●Near fire</div><div>●Dusty areas, corrosive gas outbreaks areas</div></div> <div>●Ambient temperature under 0℃ and over 35℃</div> <p>Please contact if you are not able to judge whether installation environment is suitable to the places or not.</p> <div></div> |
| | ⚠ Caution | ❗ Please follow the fixtures' indication or specification for the distance of irradiated area. (Causes of change in shape, change in color of irradiated objects) |
| For electric wiring | ⚠ Warning | ❗ Only qualified person may work on electric wiring and equipment. (Cause of accidents) |
| | | ❗ Use alternating current. Please follow rating plate of fixtures for power supply frequency. (Cause of electrification • fire) (50Hz • 60 Hz common use for ballasts and incandescent lamp fixtures) |
| | | ❗ Be sure power supply voltage is within ±6% mentioned in rating plate or the guide. (Causes of short life of lamps • electrification • fire) |
| | | ❗ Be sure all the wires and codes are not damaged. (Causes of falling • damage) |
| At lighting fixture installation | ⚠ Warning | ❗ Please follow the fixtures' instruction or this guide to install the fixture and lamp. (Causes of falling • electrification • fire) |
| | | ❗ Switch off the power when installing the lamp. (Causes of electrification) |
| | | 🚫 Do not touch the fixture when switch is on or just turn off the switch because of high temperature. |
| | | 🚫 Do not put or cover the fixture by any cloths, papers, or insulators.(Causes of not lighting • fire) |
| | | 🚫 Do not place any metallic or flammable objects. (Cause of electrification • fire • broken fixture) |
| | | ❗ Make sure to install all the parts of fixtures besides installation and mounting parts will not touch with any objects both inside and outside of ceiling such as lighting track, etc. (Causes of falling • electrification • fire) |
| | | 🚫 Do not dismount or remodel fixtures. (Cause of electrification • fire • falling • broken fixtures) |
| | | 🚫 Do not operate with wet hands. |
| | | ❗ If you smell smoke, see smoke, or find anything unusual, please turn the switch off and ask construction companies to repair. (Cause of electrification • fire) |
| | ⚠ Caution | ❗ Make sure the construction will not affect any fire prevention systems such as sprinkler by heat from the fixture. (Causes for improper operation) |

| Installation Details | | Installation Diagram | Caution |
|---|--|---|---------|
| <div>1</div> <div>Optional parts installation</div> <div>Turn around the body.</div> <div>2</div> <div>Pull out the body from the hood.</div> <div>3</div> <div>Turn around the option holder, and put out .</div> <div>4</div> <div>Put a filter in hood.</div> <div>5</div> <div>Turn around the option holder, and put in.</div> | <p>Body</p> <p>Hood</p> <p>Option Holder</p> <p>Filter</p> | <div><div></div><div>UP to 2 FILTERS</div><div>Option Holder</div><div>+</div><div><p>Sharpner Lens</p><p>Sharpner Lens</p></div></div> | |
| <div></div> <div>Please attention that the sharpener lens is counted two pieces of filter lenses.</div> | | | |
| <div></div> <div>Don't put in the filters than the rule number of pieces.</div> <div>Causes of falling and damage.</div> | | | |
| <div>1</div> <div>Wiring Connection</div> <div>Remove the maintenance cover in the box (screws 2 positions)</div> <div>2</div> <div></div> <div>3</div> | <p>Maintenance cover</p> | <div><div>CAUTION !</div><div>Do not reverse polarity !</div><div><p>+ RED</p><p>- BLACK</p></div></div> | |
| <div></div> <div>Please connect according to the description of a power supply.</div> | | | |
| <div></div> <div>When connecting the driver, careful attention should be paid to connecting + and -.</div> | | | |
| <div></div> <div>Metal part in a cable point, please don't touch with bare hand directly.</div> | <div><div>Wiring diagram</div><p>PE N L</p><p>DC480mA MAX 36.9V</p><p>+RED</p><p>-BLACK</p><p>LED</p><p>Driver</p></div> | | |

| Installation Details | | Installation Diagram | | Caution | |
|----------------------|--|--|---|---|---|
| 1 | Installation to ceiling |  | <div> <div>⚠ h</div> <div>Certainly checks</div>  </div> | | <div> <div>⚠ i</div> <div>Do not apply power with an instrument impossible for</div>  </div> |
| | <div> <div>⚠ h</div> <div>Loosen the locking knob, fold the arm</div> <div>Install after sufficiently loosen the locking knob</div> </div> | | <div> <div>Loosen</div>  <div>Knob for fixing</div> </div> | | |
| 2 | Insert the arm to the "U" shaped cut-out portion of the slide rail |  | | | |
| 3 | Slide the luminaire | | | | |
| 4 | Fixed by tightening the knob in any position |  | | | |
| | <div> <div>⚠</div> <div>Do not apply power with an instrument impossible for. It becomes a cause of fall.</div> </div> | | | | |
| | <div> <div>⚠</div> <div>Inner wall and lighting equipment of the box depending on the direction of the lighting fixture may interfere</div> </div> | | | | |
| 5 | If you use the pan lock and tilt lock | <div> <div>Pan lock</div>  </div> | | <div> <div>Tilt lock</div>  </div> | |
| | <div> <div>⚠</div> <div>Please fix the angle of the lighting equipment with the supplied Hex wrench (M2.6)</div> </div> | | | | |

(Contact)

Concord Lighting

5/F, Longbow House, 14-20 Chiswell Street, London, EC1Y 4TW, UK
Tel : +44-01273-616649

(Manufacturer)

ModuleX Inc.

#21 AraiBldg, 1-20-6 Ebisu-Minami Shibuya-ku, Tokyo
Tel : +81-3-5768-3131