



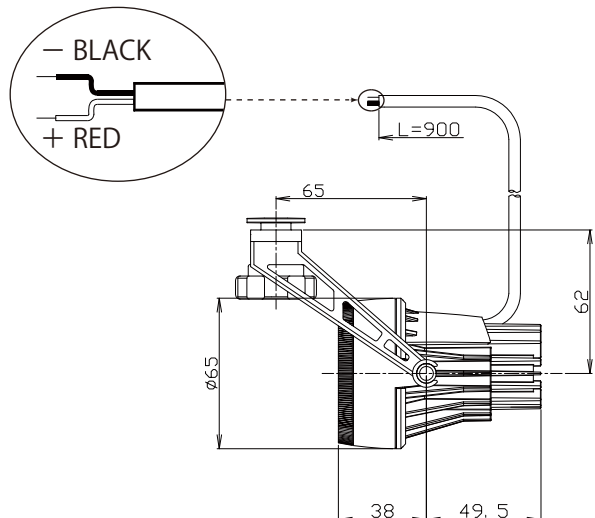

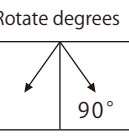




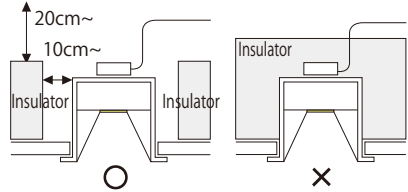















MR16 for NEO DOWNLIGHT / LINEAR ModuleX

Discontinued product  
SX-505LE/CE/RB

	Weight	Lamp	LED
	0.21kg	Input voltage	19.5V
	Rotate degrees	Input current	0.7A MAX
		Driver	Sold separately
		Please use constant current driver.	
		Optional parts	
Light distribution control filters			
Full-Diffuser Lens Filter MLA-080/DF01			
Semi-Diffuser Lens Filter MLA-080/DS03			
Full-Spread Lens Filter MLA-080/SF01			
Semi-Spread Lens Filter MLA-080/SS01			
Edge Control Lens Filter MLA-080/EC02			
Barndoor			

ModuleX

Installation Guide | Lighting Fixture

To install the fixture safely 《 Read carefully and follow all the instructions in the guide 》			
 Warning : Failure to install the fixture properly could result in personal injury.		 : Prohibited	
 Caution : Failure to install the fixture properly could result in property damage.		 : Strict observance	
Before installation	 Warning	The fixture is for indoor use only in general conditions. Can not be used following conditions (Causes of falling, electrocution and fire) ●Inclined, uneven surface      ●Insulated inside of ceiling      ●Ambient temperature under 0°C and over 35°C ●High humidity      ●Ceiling which can't hold the fixture weight ●Outside      ●On the wall ●On the floor      ●Places affected by wind or air-conditioner machine ●Vibrated or shocked areas      ●Near fire ●Areas get direct sunlight      ●Dusty areas, corrosive gas outbreaks areas Please contact if you are not able to judge whether installation environment is suitable to the places or not.	
	 Caution	Please follow the fixtures' indication or specification for the distance of irradiated area. (Causes of change in shape, change in color of irradiated objects)	
For electric wiring	 Warning		
		 Only qualified person may work on electric wiring and equipment. (Cause of accidents)	
		 Use alternating current. Please follow rating plate of fixtures for power supply frequency. (Cause of electrification • fire) (50Hz • 60 Hz common use for ballasts and incandescent lamp fixtures)	
		 Be sure power supply voltage is within ±6% mentioned in rating plate or the guide. (Causes of short life of lamps • electrification • fire)	
At lighting fixture installation	 Warning	 Please follow the fixtures' instruction or this guide to install the fixture and lamp. (Causes of falling • electrification • fire)	
		 Switch off the power when installing the lamp. (Causes of electrification)	
		 Do not touch the fixture when switch is on or just turn off the switch because of high temperature.	
		 Do not put or cover the fixture by any cloths, papers, or insulators.(Causes of not lighting • fire)	
		 Do not place any metallic or flammable objects. (Cause of electrification • fire • broken fixture)	
		 Make sure to install all the parts of fixtures besides installation and mounting parts will not touch with any objects both inside and outside of ceiling such as lighting track, etc. (Causes of falling • electrification • fire)	
		 Do not dismount or remodel fixtures. (Cause of electrification • fire • falling • broken fixtures)	
		 Do not operate with wet hands.	
		 If you smell smoke, see smoke, or find anything unusual, please turn the switch off and ask construction companies to repair. (Cause of electrification • fire)	
	 Caution	 Make sure the construction will not affect any fire prevention systems such as sprinkler by heat from the fixture. (Causes for improper operation)	

