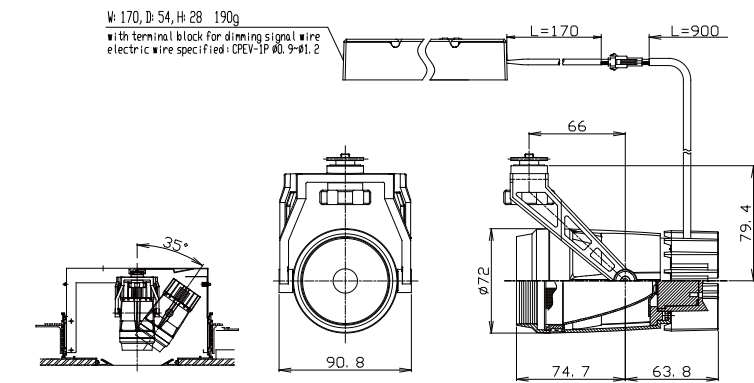
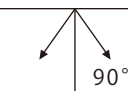



























Discontinued product
SX-900LE/Z102/RB

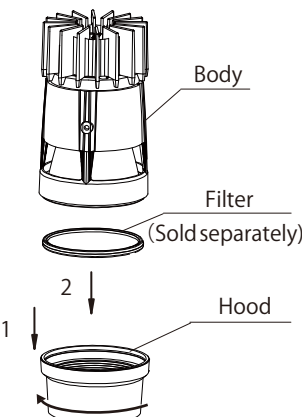


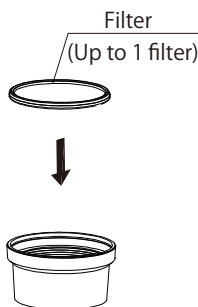
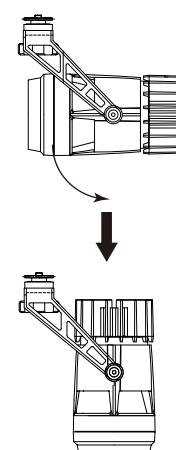


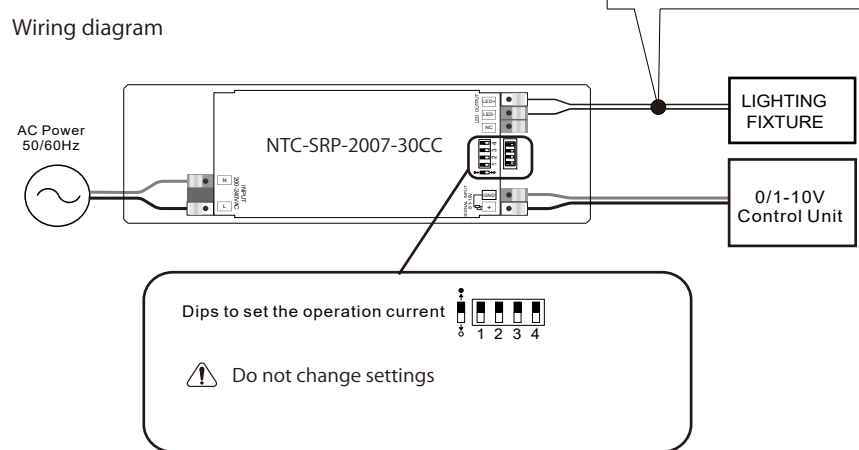

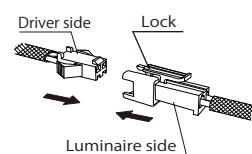



 <p>W: 170, D: 54, H: 28 190g with terminal block for dimming signal wire electric wire specified: CPEV-3P #0.9-#1.2</p> <p>Maximum vertical aiming angle inside the mounting box</p>	Weight	Light Source LED module	
	0.62kg	Dedicated Driver	Constant Current
	Rotate degrees	Driver	Input Voltage 220V/240V±6% 50Hz/60Hz
	90°	Input Current	0.155A/0.143A
		Power Consumption	30.7W/30.9W
		Dimming method	0-10V
Fixture			
Input Voltage		38.6V	
Input Current		0.7A	
Dimmer			
SR-2830AS-1-10V			
OPTION(1 filter attachable)			
Diffusion lens		SA-3DL03	
Wide Diffusion lens		SA-3DF01	
Spread lens		SA-3SP01	
Honeycomb louver		SA-3HCO2	
Conversion filter		SA-3CV02~03	
Edge control filter		SA-3EC01	
Sharpener		SA-3SH01	
(available only for narrow distribution)			

ModuleX

Installation Guide | Lighting Fixture

To install the fixture safely 《 Read carefully and follow all the instructions in the guide 》			
 Warning : Failure to install the fixture properly could result in personal injury.		 : Prohibited	
 Caution : Failure to install the fixture properly could result in property damage.		 : Strict observance	
Before installation	 Warning	The fixture is for indoor use only in general conditions.This fixture can only be installed on a horizontal ceiling. Can not be used following conditions (Causes of falling, electrocution and fire)	
		<div><div><div>●Inclined, uneven surface</div><div>●High humidity</div><div>●Outside</div><div>●On the floor</div><div>●Vibrated or shocked areas</div><div>●Areas get direct sunlight</div></div><div><div>●Insulated inside of ceiling</div><div>●Ceiling which can't hold the fixture weight</div><div>●On the wall</div><div>●Places affected by wind or air-conditioner machine</div><div>●Near fire</div><div>●Dusty areas, corrosive gas outbreaks areas</div></div><div><div>●Ambient temperature under 0°C and over 35°C</div></div></div> <div><div><div>10cm~</div><div>20cm~</div><div>10cm~</div></div><div><div>Insulator</div><div>Insulator</div><div>Insulator</div></div><div><div>○</div><div>×</div></div></div> <p>Please contact if you are not able to judge whether installation environment is suitable to the places or not.</p>	
For electric wiring	 Caution		Please follow the fixtures' indication or specification for the distance of irradiated area. (Causes of change in shape, change in color of irradiated objects)
			Only qualified person may work on electric wiring and equipment. (Cause of accidents)
			Use alternating current. Please follow rating plate of fixtures for power supply frequency. (Cause of electrification • fire) (50Hz • 60 Hz common use for ballasts and incandescent lamp fixtures)
			Be sure power supply voltage is within ±6% mentioned in rating plate or the guide.(Causes of short life of lamps • electrification • fire)
At lighting fixture installation			Be sure all the wires and codes are not damaged. (Causes of falling • damage)
			Please follow the fixtures' instruction or this guide to install the fixture and lamp. (Causes of falling • electrification • fire)
			Switch off the power when installing the lamp. (Causes of electrification)
			Do not touch the fixture when switch is on or just turn off the switch because of high temperature.
			Do not put or cover the fixture by any cloths, papers, or insulators.(Causes of not lighting • fire)
			Do not place any metallic or flammable objects. (Cause of electrification • fire • broken fixture)
			Make sure to install all the parts of fixtures besides installation and mounting parts will not touch with any objects both inside and outside of ceiling such as lighting track, etc. (Causes of falling • electrification • fire)
			Do not dismount or remodel fixtures. (Cause of electrification • fire • falling • broken fixtures)
			Do not operate with wet hands.
			If you smell smoke, see smoke, or find anything unusual, please turn the switch off and ask construction companies to repair. (Cause of electrification • fire)
			Make sure the construction will not affect any fire prevention systems such as sprinkler by heat from the fixture. (Causes for improper operation)

SX-900LE/Z102/RB

Installation Details		Installation Diagram	Caution	
Optional parts installation 【Filter】				
1	Turn the hood.			
2	Put a filter in hood and put it back.			
	The filter sandwiches it between hood and the fixture and is put on. A filter, please be careful not to drop on the occasion of desorption of hood.			
	When you take off hood, please lower direction of radiation.			
1 Connect the bundled dedicated Driver to the connector of Luminaire				
2 Please connect according to the description of the power supply.				
3 Install a dedicated driver on the ceiling				
	Be sure to turn off the power before working			
	Connect the connector securely. If you remove it pull while holding the lock. Do not connect or disconnect the connector while the power is on. (Cause of trouble)			
	Do not touch the metal terminals on the inside of the connector directly with your hands.			

Installation Details		Installation Diagram	Caution	
Installation to ceiling				
1	Loose the knob for fixing, attached to a slide rail.		Certainly checks	
2	A main part is slid and it fixes in arbitrary positions.			
	Attach after loosening a knob.			
	Do not apply power with an instrument impossible for. It becomes a cause of fall.			