
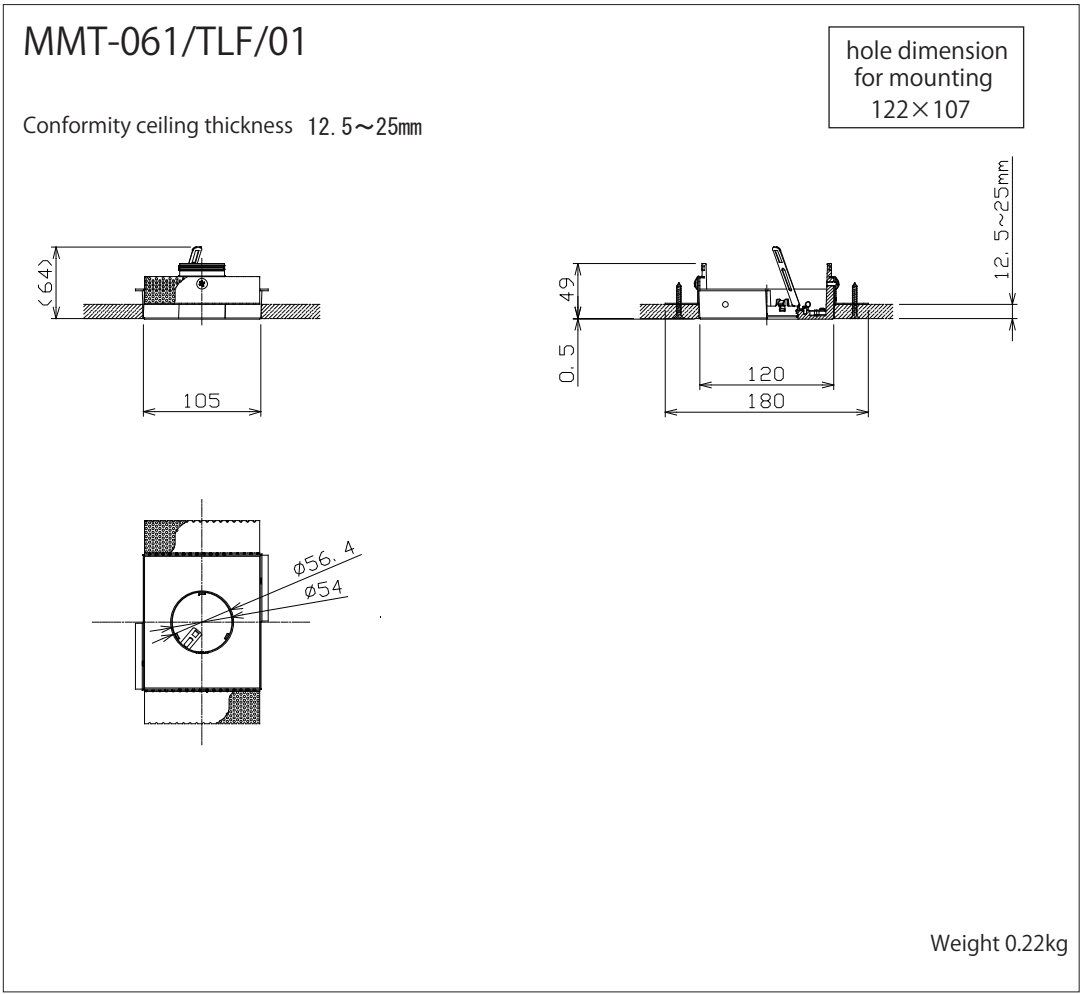
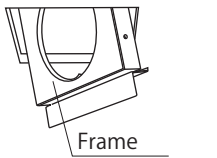
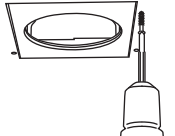
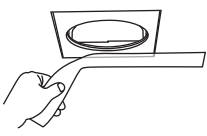
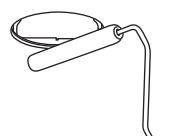
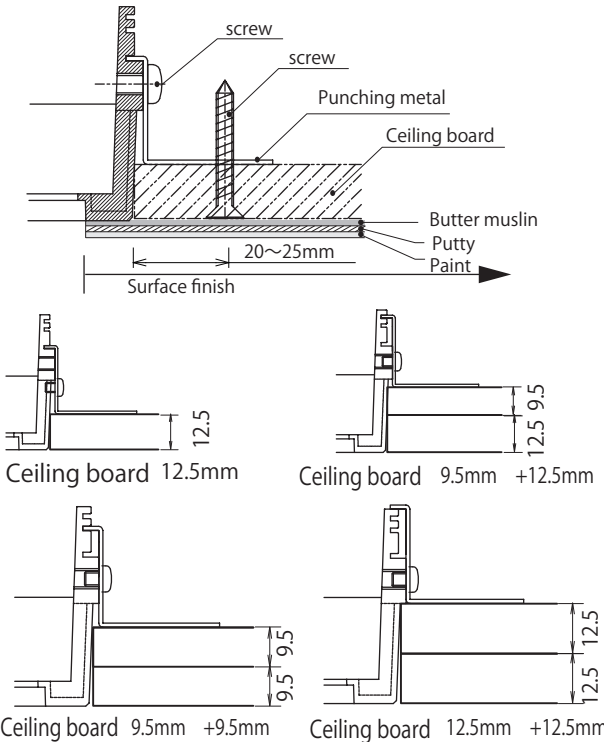
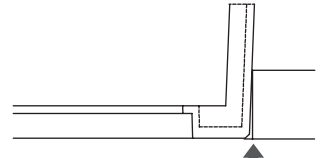
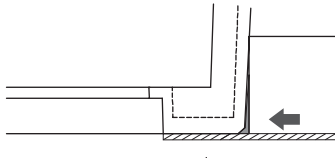
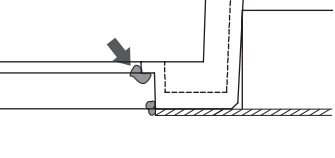
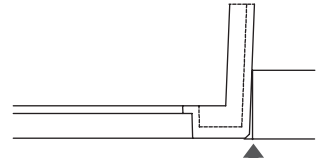
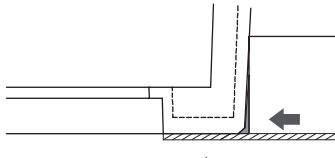
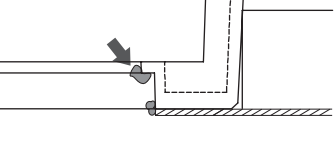
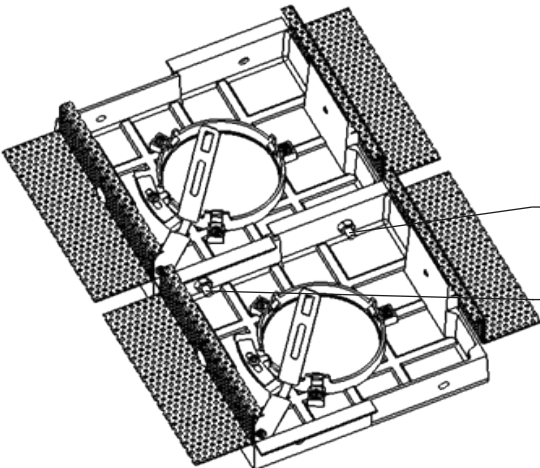
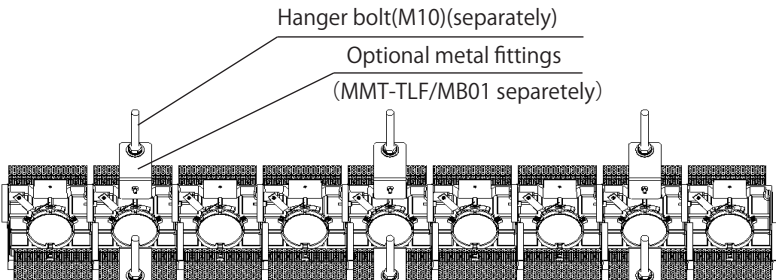


MMT-061/TLF/01

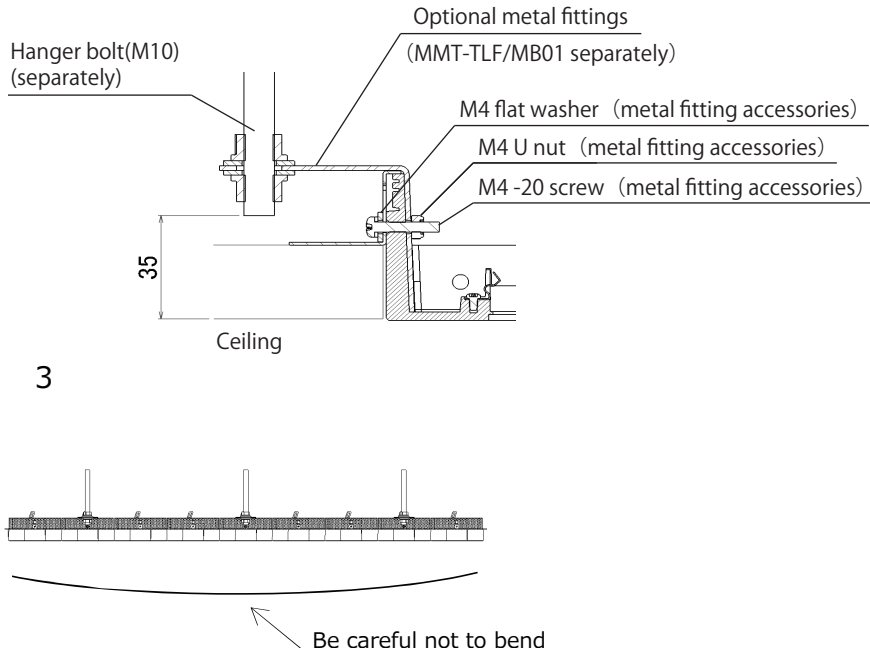

ModuleX

Installation Details		Installation Diagram	Caution
<div>1</div> <div>⚠a</div>	Install the mounting in the opening of the ceiling Open the mounting hole and insert the frame.	<div>1 Ceiling cut out</div> <div>Recommended hole dimension for mounting 122×107</div>  <div>2</div>  <div>3</div>  <div>4</div> 	<div>⚠a</div> 
	After adjusting the thickness of the board, secure the punching metal to the box with screw securely.		
	Install the drilling tapped screws in the location of the 20-25mm from the edge of a box.		
	Finish the surface of the ceiling board and the box with cheesecloth undercoat and putty.		
4	Decorate the ceiling to finish.		
<div>⚠b</div> <div>b-1</div> <div>b-2</div> <div>b-3</div>	For ceiling construction, it becomes contractor's work, but be careful on the cautions of the construction.	<div>⚠b</div> <div>b-1</div>  <div>b-2</div>  <div>b-3</div> 	<div>⚠b</div> <div>b-1</div>  <div>b-2</div>  <div>b-3</div> 
	Make sure to have the ceiling surface and the opening to become flush.		
	When constructing, make sure the putty is securely finished and there will be no crack.		
	Make sure there will be no ceiling paint on the opening of the box.		

Installation Details		Installation Diagram	
<div>Procedure for connecting frames and frames</div> <div>1</div> <div>Align the direction of the frame and the frame. Tighten screws and nuts in two places on a flat workbench</div> <div>2</div> <div>When connecting four or more frames, attach the optional metal fittings to the frame. Hang the hanger bolt with the nut fixed to the metal fittings.</div> <div>3</div> <div>When connecting four or more frames, adjust with a hanger bolt so as not to bend</div> <div><div>Recommended bolt hanger application conditions</div><div>①When concatenating 4 or more</div><div>②Hang with bolts every 3 frames</div></div> <div><div>⚠</div><div>When applying bolt hanging construction work before applying the ceiling board</div></div>		<div>1</div> <div><div>M4 U nut +M4-12 Hexagon socket head cap screw (separately)</div><div>M4 U nut +M4-12 Hexagon socket head cap screw (separately)</div></div> <div>2</div> <div><div>Hanger bolt(M10)(separately)</div><div>Optional metal fittings (MMT-TLF/MB01 separately)</div></div> <div>3</div> <div><div>Optional metal fittings (MMT-TLF/MB01 separately)</div><div>Hanger bolt(M10) (separately)</div><div>M4 flat washer (metal fitting accessories)</div><div>M4 U nut (metal fitting accessories)</div><div>M4 -20 screw (metal fitting accessories)</div><div>35</div><div>Ceiling</div><div>Be careful not to bend</div></div>	