

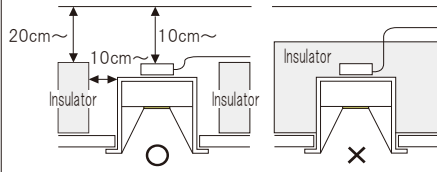
Discontinued Product
MSP-100W/30B/DL/3

| | | |
|---|--|---|
| <p>Technical drawing of the ceiling-mounted lamp. The side view shows a lamp body with a diameter of $\phi 110$ and a height of 101 mm. The mounting bracket has a height of 9~25 mm. The ceiling hole diameter is $\phi 100$. The wiring is labeled with a red (+) and black (-) terminal, with a terminal dimension of $\phi 1.0 \times \text{length } 9.5\text{mm}$. The effective dimension of the mounting arm is 280 mm. The top view shows the lamp body with a diameter of $\phi 110$ and a mounting bracket with a diameter of $\phi 100$. The mounting bracket is labeled "Aiming at wall side" with an arrow pointing left.</p> | <p>[mm]</p> <p>Ceiling cut out</p> <p>$\phi 100$</p> <p>Ceiling thickness</p> <p>9~25 mm</p> <p>Weight</p> <p>0.5kg</p> | <p>Lamp COB</p> <p>Input voltage 37.8V</p> <p>Input current 0.9A MAX</p> <p>Driver Sold separately</p> <p>Please use constant current driver.</p> |
|---|--|---|

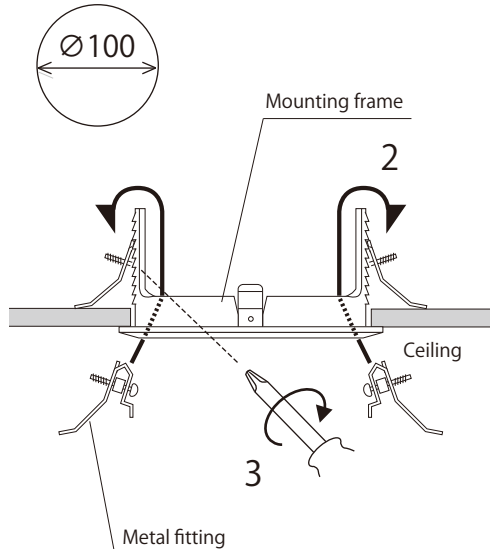
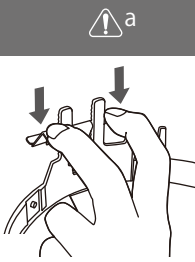


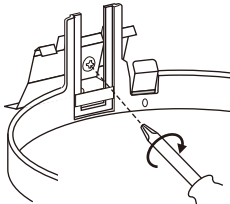


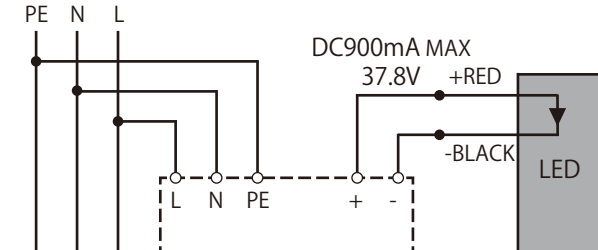
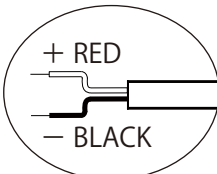
ModuleX

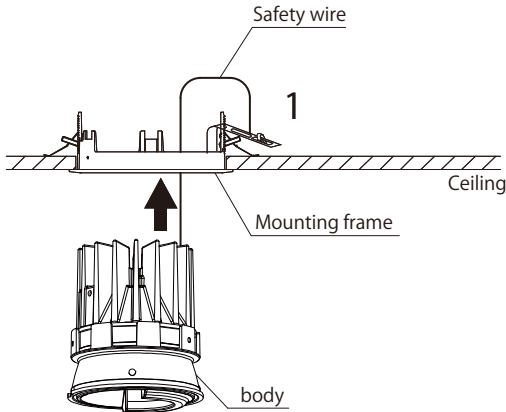
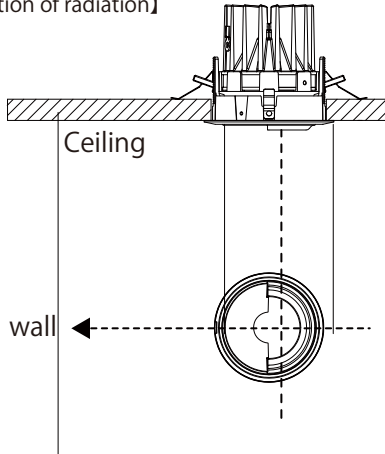

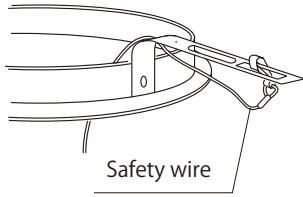

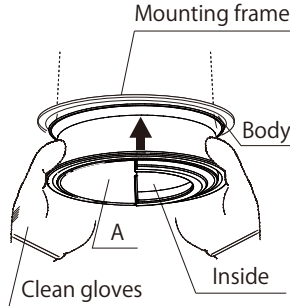



Installation Guide

MSP-100W/30B/DL/3

| To install the fixture safely 《 Read carefully and follow all the instructions in the guide 》 | | | |
|--|--|---|---|
| ⚠ Warning : Failure to install the fixture properly could result in persona l injury. | | ⊘ : Prohibited | |
| ⚠ Caution : Failure to install the fixture properly could result in property damage. | | ❗ : Strict observance | |
| Before installation | ⚠ Warning | ⊘ | <p>The fixture is for indoor use only in general conditions.This fixture can only be installed on a horizontal ceiling. Can not be used following conditions (Causes of falling, electrocution and fire)</p> <div><div>●On the wall</div><div>●Plases affected by wind or air-conditioner mashine</div><div>●On the floor</div><div>●Inclined, uneven surface</div><div>●Outside</div><div>●Ambient temperature under 0℃ and over 35℃</div><div>●Near fire</div><div>●Ceiling which can't hold the fixture weight</div><div>●High humidity</div><div>●Dusty areas, corrosive gas outbreaks areas</div><div>●Areas get direct sunlight</div><div>●Vibrated or shocked areas</div></div> <p>Please contact if you are not able to judge whether installation environment is suitable to the places or not.</p> <div><div>●Insulated inside of ceiling</div><div></div></div> |
| | | | ⚠ Caution |
| | <p>❗ Please follow the fixtures' indication or specification for the distance of irradiated area. (Causes of change in shape, change in color of irradiated objects)</p> | | |
| | <p>❗ Carefully check the size of the lighting fixtures and secure sufficient space in the ceiling.</p> | | |
| For electric wiring | ⚠ Warning | ❗ | <p>❗ Only qualified person may work on electric wiring and equipment.(Cause of accidents)</p> |
| | | | <p>❗ Please use a compatible power supply and compatible driver. (Cause of non-lighting / fire)</p> |
| | | | <p>❗ Be sure power supply voltage is within ±6% mentioned in rating plate or the guide. (Causes of short life of lamps•electrification•fire)</p> |
| | | | <p>❗ Be sure all the wires and codes are not damaged. (Causes of falling•damage)</p> |
| | | | <p>⊘ Do not perform live-line construction. There is a risk of electric shock or product failure.</p> |
| | | | <p>⊘ Do not install other electronic devices (devices that use a motor such as a ventilation fan) in the same circuit as it may lead to equipment failure.</p> |
| | | | At lighting fixture installation |
| <p>❗ Models equipped with a safety wire (fall prevention wire) as standard equipment to prevent falling due to an earthquake, etc. Be sure to install it securely according to this manual.</p> | | | |
| <p>❗ Be sure to turn off the power when installing the fixture or lamp. (Cause of electric shock)</p> | | | |
| <p>⊘ Do not touch the fixture when switch is on or just turn off the switch because of high temperature.</p> | | | |
| <p>⊘ Do not put or cover the fixture by any cloths, papers, or insulators.(Causes of not lighting•fire)</p> | | | |
| <p>⊘ Do not put metal or burning objects in the gaps of the equipment. (Causes of electric shock, fire, and equipment failure)</p> | | | |
| <p>❗ Make sure that the outer shell of the main body other than the equipment mounting part does not come into contact with equipment such as construction materials and ducts inside and outside the ceiling. (Causes of falling, electric shock, and fire)</p> | | | |
| <p>⊘ Do not dismount or remodel fixtures. (Cause of electrification • fire • falling • broken fixtures)</p> | | | |
| <p>⊘ Do not operate with wet hands.</p> | | | |
| <p>⊘ Do not grab and lift wires or cables that are not the product itself. It may be damaged.</p> | | | |
| <p>❗ If you smell smoke, see smoke, or find anything unusual, please turn the switch off and ask construction companies to repair. (Cause of electrification•fire)</p> | | | |
| ⚠ Caution | ❗ | <p>❗ Use protective equipment such as clean gloves when installing and removing equipment. (Cause of injury)</p> | |
| | | <p>❗ Install so that the heat of the equipment does not affect the fire protection equipment such as sprinklers. (Cause of malfunction)</p> | |
| | | <p>❗ Please note that noise may enter the device if it is lit near a communication device such as a radio.</p> | |

MSP-100W/30B/DL/3

| Installation Details | | Installation Diagram • Caution | |
|---|--|---|--|
| <p>Install the mounting equipment for ceiling cut out</p> <p>1 Cut out a hole and install the mounting frame.</p> <p>2 Slide the metal fittings from upper side.</p> <p>3 Use a screw driver and tighten the metal fittings.</p> | | <p>1 Ceiling cut out</p>  | <p> a</p> <p>Push tight</p> |
| <p> a</p> <p>On step 2, please fix the metal fitting firmly with your fingers. If not, it may cause falling of fixtures.</p> | <p> b</p> <p></p> <p>Standard to screw torque 1.0~2.0N・m</p> | | |
| <p> b</p> <p>Make sure to tighten the metal fittings securely with a screwdriver. (torque 1.0 ~2.0 N・m) If it is loose, it may cause falling of the fixture.</p> | | | |
| <p> c</p> <p>Make sure to have the height at least 150mm above the ceiling to install the driver.</p> | | | |
| <p>Wiring connection</p> <p>Please connect according to the description of a power supply.</p> <p>When connecting the driver, careful attention should be paid to connecting + and -.</p> <p>Metal part in a cable point, please don't touch with bare hand directly.</p> | | <p>Wiring diagram</p>  <p>Driver</p> <p>CAUTION ! Do not reverse polarity !</p>  | |

| Installation Details | | Installation Diagram • Caution | |
|--|--|--|---|
| | <h3>Installation to ceiling</h3> <div><div>1</div><div>Install the safety wire to the mounting frame.</div><div>2</div><div>Install the fixture to the mounting frame.</div></div> |  <p>【Direction of radiation】</p>  | <div><p>c</p><p>Safety wire</p></div> <div><p>d</p><p>Mounting frame</p><p>Body</p><p>A</p><p>Inside</p><p>Clean gloves</p></div> <p>※When you remove fixture from mounting frame , as you support edge of a main part, please reduce with the portion of A.</p> |
|  <p>c</p> | Make sure to install the safety wire to the mounting frame securely. | | |
|  <p>d</p> | Do not touch inner side of the body with bare hands. Use clean soft cloth to clean up and maintain inner side of the body | | |
|  <p>e</p> | Make sure the fixture will not touch any objects in ceiling. | | |