
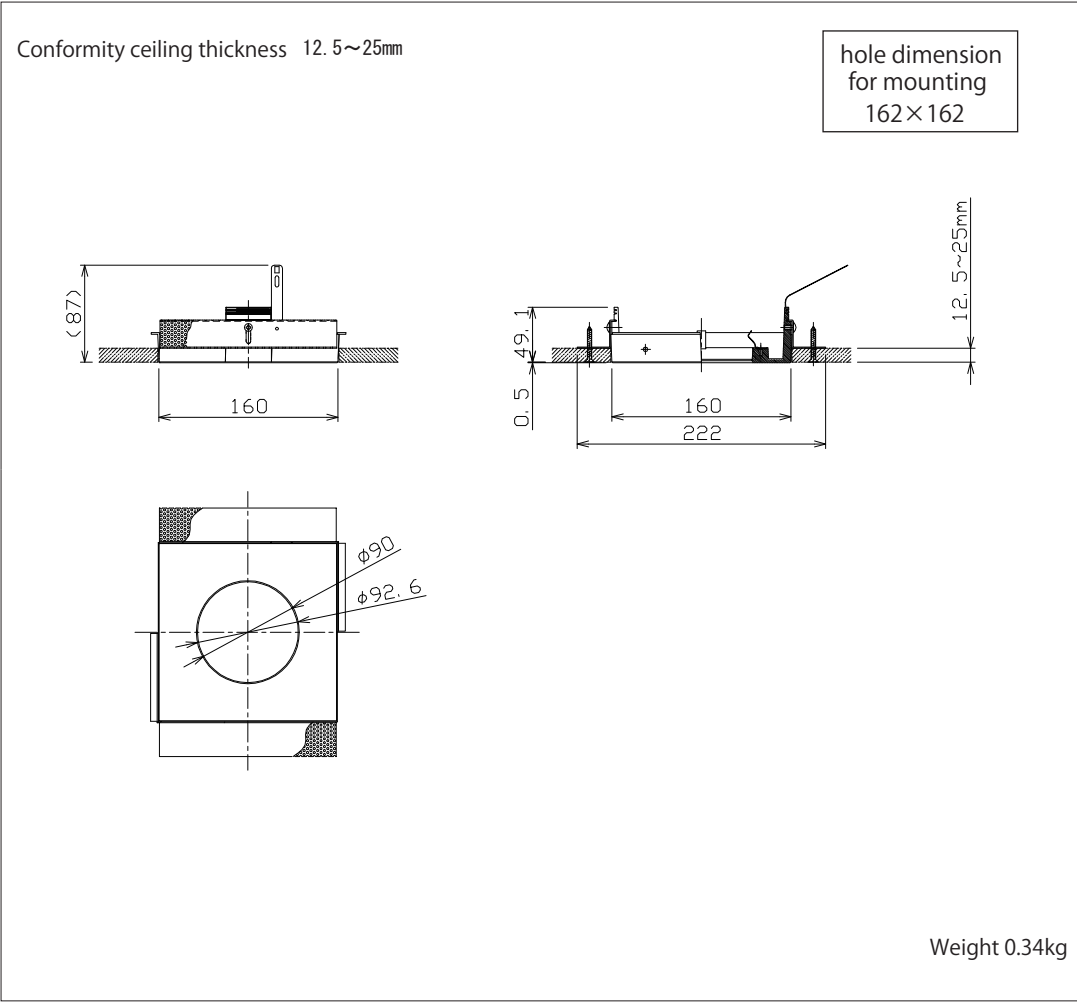
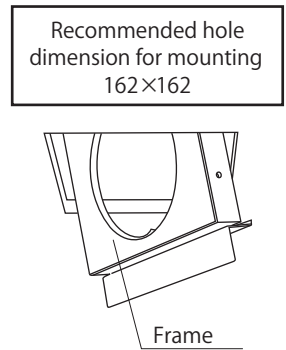
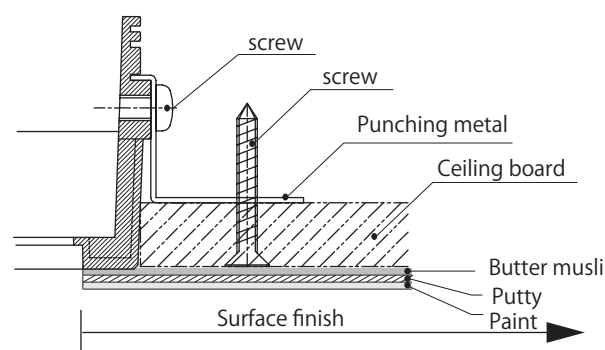
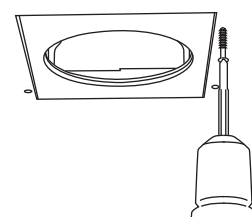
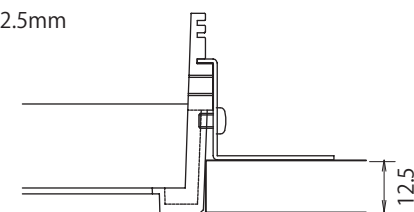
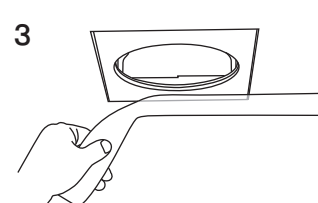
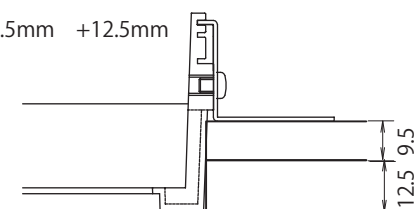
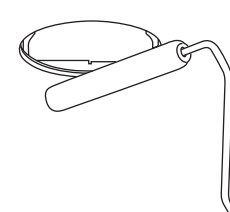
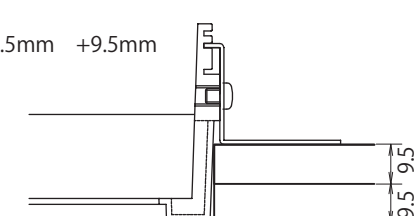
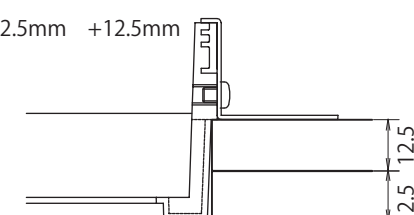
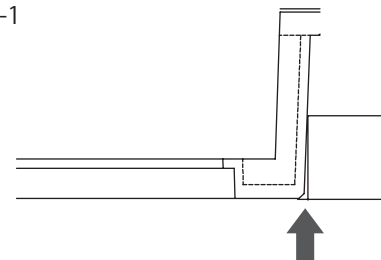
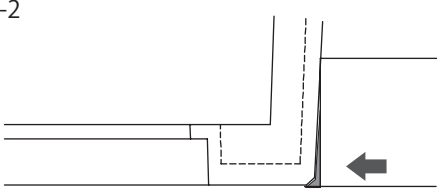


MMT-101/TLF/01

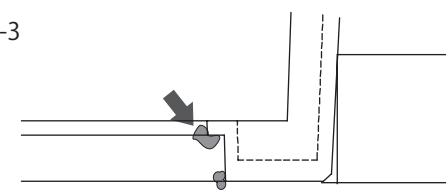

ModuleX

Installation Details		Installation Diagram	Caution
1	Install the mounting in the opening of the ceiling Open the mounting hole and insert the frame.	<div>1 Ceiling cut out</div> <div>Recommended hole dimension for mounting 162×162</div> 	<div>⚠ a</div> 
<div>⚠ a</div>	After adjusting the thickness of the board, secure the punching metal to the box with screw securely.		
2	Secure the punching metal to the implant box with screw.	<div>2</div> 	<div>Ceiling board 12.5mm</div> 
3	Finish the surface of the ceiling board and the box with cheesecloth undercoat and putty.	<div>3</div> 	<div>Ceiling board 9.5mm +12.5mm</div> 
4	Decorate the ceiling to finish.	<div>4</div> 	<div>Ceiling board 9.5mm +9.5mm</div> 
			<div>Ceiling board 12.5mm +12.5mm</div> 

Installation Details		Installation Diagram	Caution
<div>⚠ b</div>	For ceiling construction, it becomes contractor's work, but be careful on the cautions of the construction.		<div>⚠ b</div>
b-1	Make sure to have the ceiling surface and the opening to become flush.		<div>b-1</div>  <div>b-2</div>  <div>b-3</div> 
b-2	When constructing, make sure the putty is securely finished and there will be no crack.		
b-3	Make sure there will be no ceiling paint on the opening of the box.		

(Contact)

Concord Lighting

5/F, Longbow House, 14-20 Chiswell Street, London, EC1Y 4TW, UK
Tel : +44-01273-616649

(Manufacturer)

ModuleX Inc.

#21 AraiBldg, 1-20-6 Ebisu-Minami Shibuya-ku, Tokyo
Tel : +81-3-5768-3131